

BMA

Secur24 Exclusive

Functions of the Secur24 Exclusive



Pelvis support
Depth and height
setting
Operation:
on both sides
of the chair




Seat depth setting
Operation:
on the right side
of the chair



Seat angle
-5° - +15°
Operation:
on both sides
of the chair



Weight setting
40 - 130 kg
Operation:
central under the
front of the seat

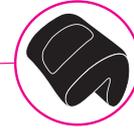

Headrest
Height: 0 - 12 cm
Depth: 0 - 10 cm
Operation:
in the headrest



Flip up armrests
Operation:
Rotate the wheel
located under the
armrests



Back angle
-12° - +22°
Operation:
on both sides
of the chair



Seat height
41-55 cm
Operation:
on both sides
of the chair



Dimensions

Back rest (w x h)	50 x 64 cm
Seat (w x d)	50 x 48 cm
Star base	ø 71 cm



*The Secur24 Exclusive meets and exceeds European Standards.

Adjustments Secur24 Exclusive



Headrest

Raise the headrest to adjust it in height. Rotate the headrest to adjust the angle.



Armrests

Flip up:

Rotate the wheel located under the front end of the armrests to adjust the angle up or down. Raise the armrests at the front to flip it backwards.

Flip up and height adjustable (optional):

Rotate the wheel located under the front end of the armrests to adjust the height. Raise the armrests at the front to flip it backwards.

Multi (optional):

Depress the button located under the armrests to adjust the height. Twisting the upper part of the armrests establishes the direction.



Pelvis support / depth and height setting

Rotate the wheel to adjust the pelvis support in depth and height. By rotating the wheel you can give the pelvis less or more support.



Back angle adjustment

Rotate the wheel to adjust the back angle.



Weight setting

Rotate the knob clockwise to increase the weight resistance in the rocking motion. Rotate knob anti-clockwise to decrease the weight resistance. Check that the weight resistance balances your body weight.



Seat height adjustment

Raise the lever to adjust the seat height. Adjust seat to the desired height. Release lever to lock. Check that your feet are firmly on the floor.



Seat angle adjustment

Raise lever to adjust the angle of the seat. Push lever down to lock position.



Seat depth setting

With the lever the seat depth can be adjusted.

